

Typenschlüssel : Bediengerät

BTV04.2


Visualisierungs-Bedienterminal

INN 48.20-4-2
1999-12-16

Kurztext-Spalte →	1	2	3	4	5	6	7	8	9	1	0	1	2	3	4	5	6	7	8	9	2	0	1	2	3	4	5	6	7	8	9	3	0	1	2	3	4	5	6	7	8	9	4	0									
Beispiel:	B	T	V	0	4	.	2	G	N	-	F	W																																									

- 1. Produktgruppe**
 - 1.1 BTV..... = BTV
- 2. Baureihe**
 - 2.1 4..... = 04
- 3. Ausführung**
 - 3.1 2..... = 2
- 4. Display**
 - 4.1 grafikfähig, 128 X 64 Punkte = G
- 5. Tastatur**
 - 5.1 Standard = N
- 6. Firmware**
 - 6.1 Kennzeichnung, dass Firmware als separate Unterposition bestellt werden muss..... = FW

Bildbeispiel: BTV04.2

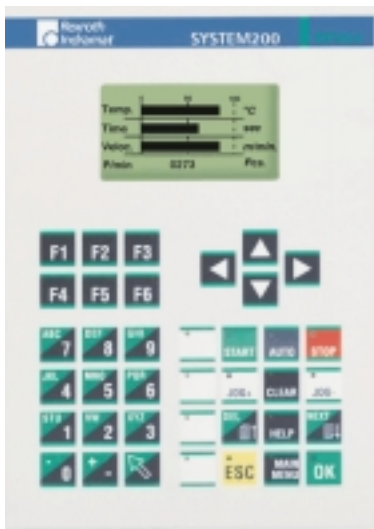

"Schutzvermerk DIN 34 beachten" - "Copyright reserved"

Dok. INN-48-20-T04-02-M02-BTV.fh8

Type code : User terminal

BTV04.2

Visual user terminal

INN 48.20-4-2
1999-12-16

Abbrev. Column →	1										2										3									
	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
Example:	B	T	V	0	4	.	2	G	N	-	F	W																		

- 1. Product group**
 - 1.1 BTV..... = BTV
- 2. Line**
 - 2.1 4 = 04
- 3. Design**
 - 3.1 2 = 2
- 4. Display**
 - 4.1 graphics capability, 128 X 64 Pixel = G
- 5. Keyboard**
 - 5.1 Standard = N
- 6. Firmware**
 - 6.1 Denotes that firmware must be ordered as separate subposition = FW

Illustration example: BTV04.2



"Schutzvermerk DIN 34 beachten" - "Copyright reserved"

Doc: INN-48-20-T04-02-M02-BTV.fh8