



Type code : User terminal

**BTC06.2**

Hand-control unit

**INN 48.01-06-02**

2001-06-18

| Abbrev. Column | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 2 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 3 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 4 | 0 |  |
|----------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|
| Example:       | B | T | C | 0 | 6 | . | 2 | A | - | F | - | F | H | 3 | - | F | W |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |  |

**1. Product**

1.1 BTC ..... = BTC

**2. Line**

2.1 6 ..... = 06

**3. Design**

3.1 2 ..... = 2

**4. Interface**

4.1 RS232C and RS422A / RS485 ..... = A

**5. Keyboard**

5.1 Slide-in strips for 40 keys ..... = F

**6. Function design**

| Code  | EH3 | EN3 | EP3 |
|---|-----|-----|-----|
| <b>Function</b>                               |     |     |     |
| 6.1 Handwheel                                 | 1   | -   | -   |
| 6.2 Emergency-Stop                            | 1   | 1   | 1   |
| 6.3 Override pot.meter                        | 1   | -   | 1   |
| 6.4 Activate button three stage, dual circuit | 1   | 1   | 1   |

**7. Firmware**

7.1 Denotes that firmware must be ordered as separate subposition = FW

**Illustration example: BTC06.2**



"Schutzvermerk DIN 34 beachten" - "Copyright reserved"

Doc: INN-48-01-T06-02-M03-BTC.fn9